



FUEL PUMP, FUEL PUMP MOTION WORK AND FUEL LIFT PUMP—Section 4—Plate 13

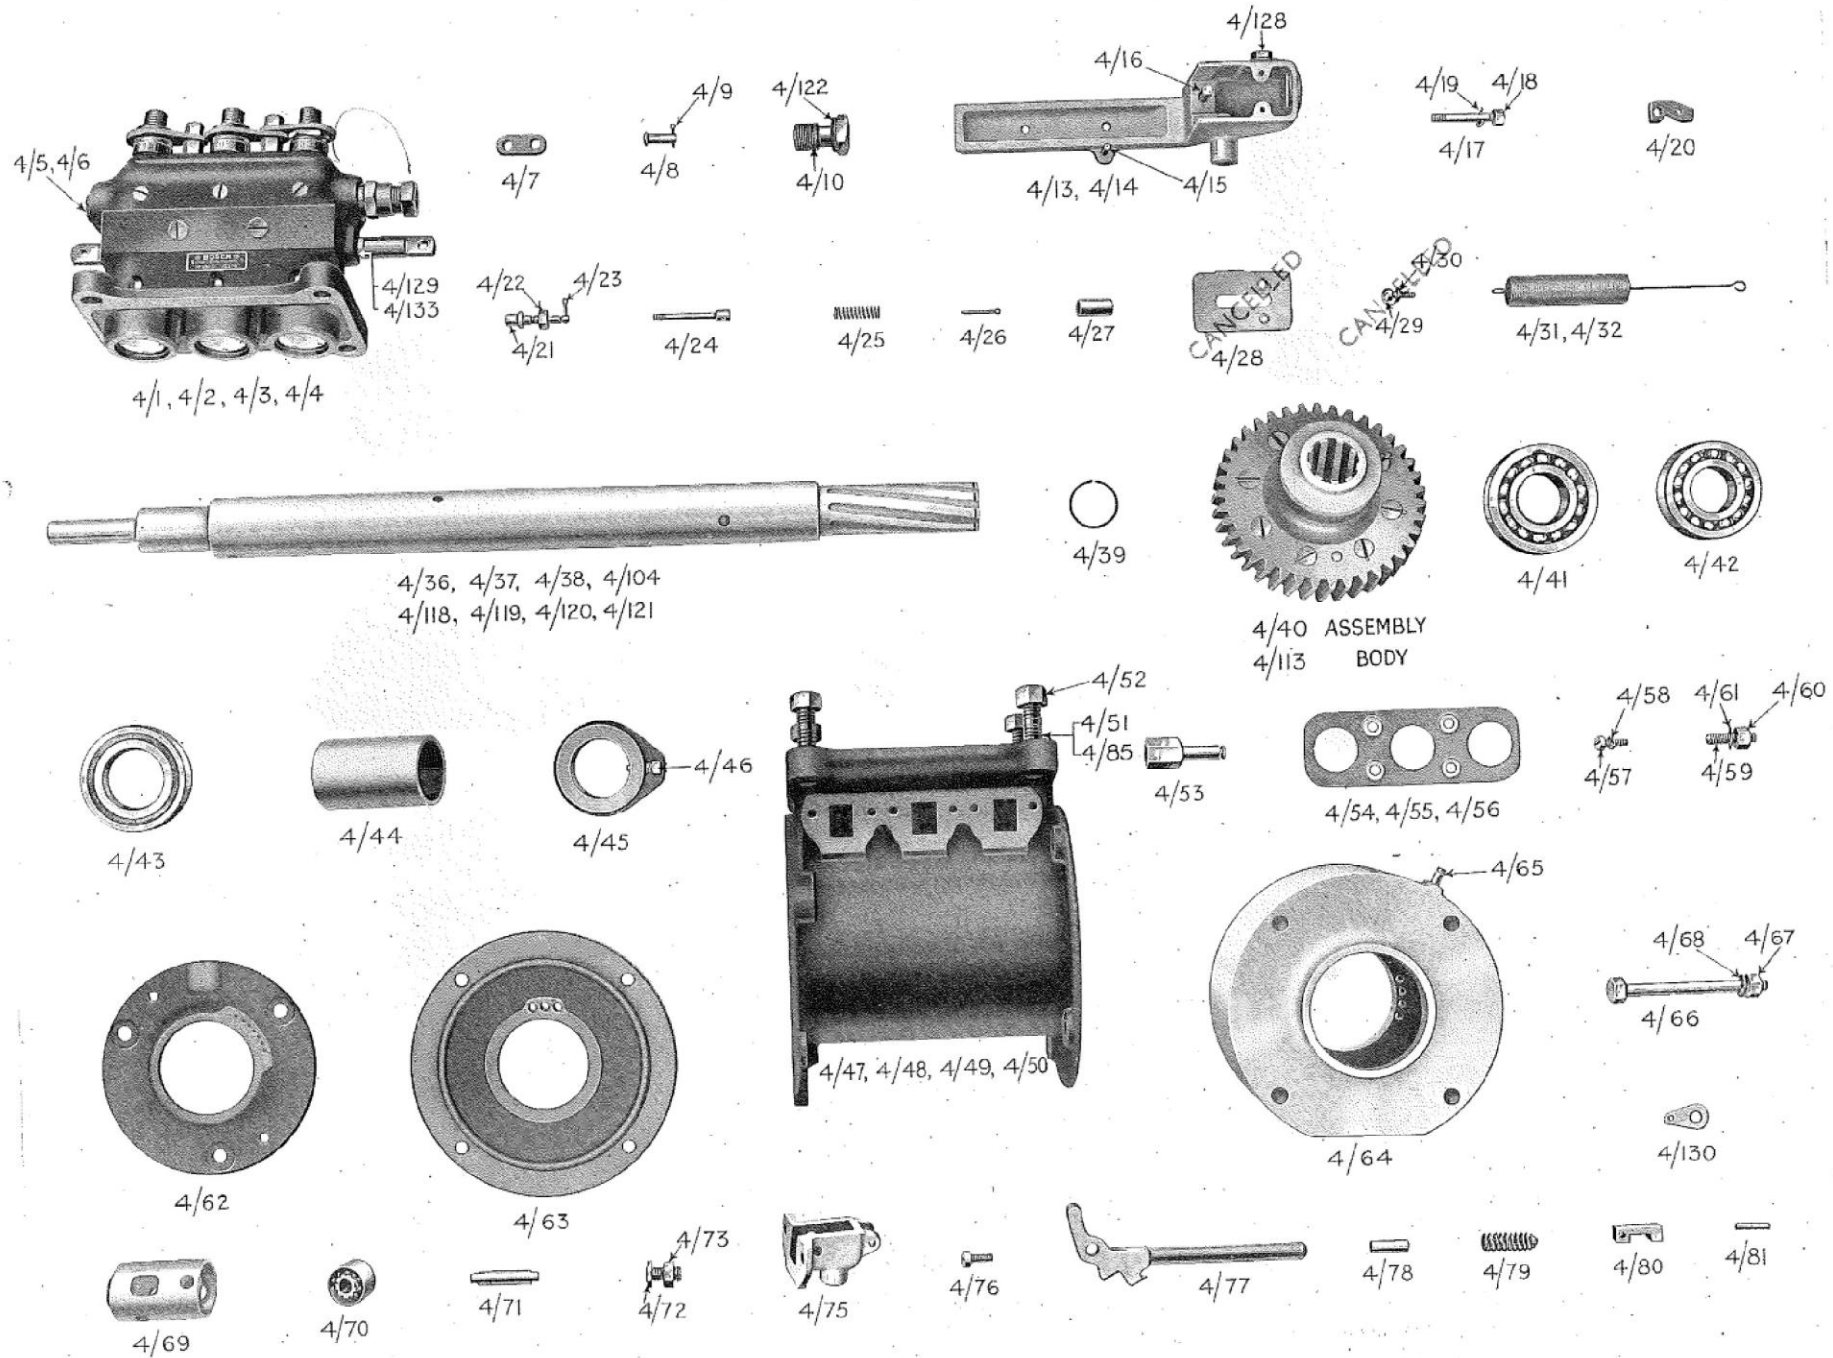


For List see Pages Nos. 51 to 55

FUEL PUMP, FUEL PUMP MOTION WORK AND FUEL LIFT PUMP—Section 4—Plate 13·1

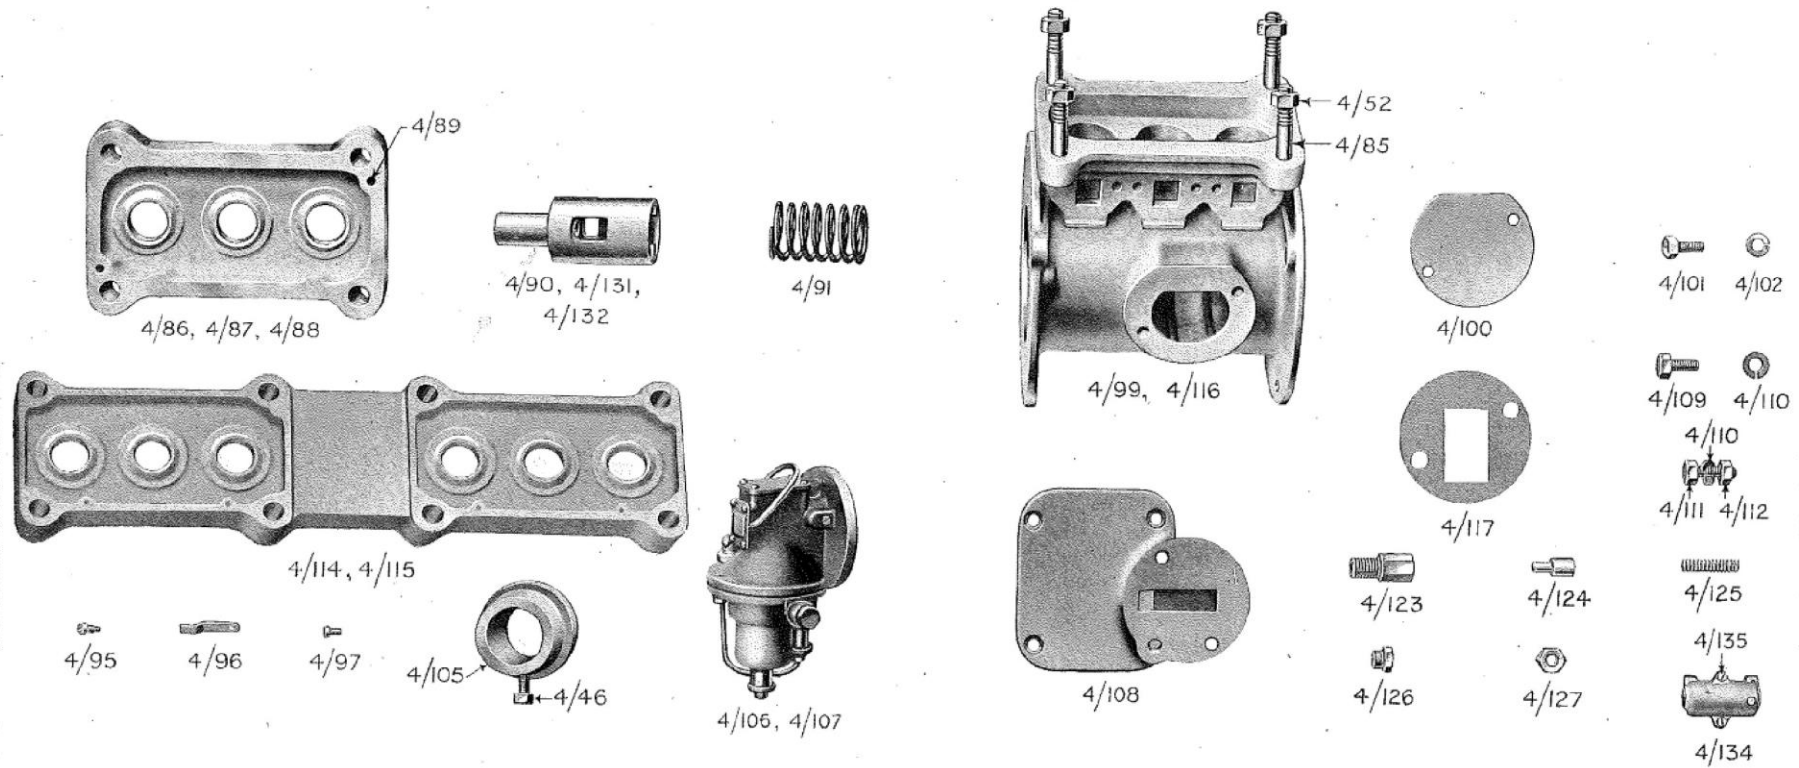






For List see Pages Nos. 52 to 55

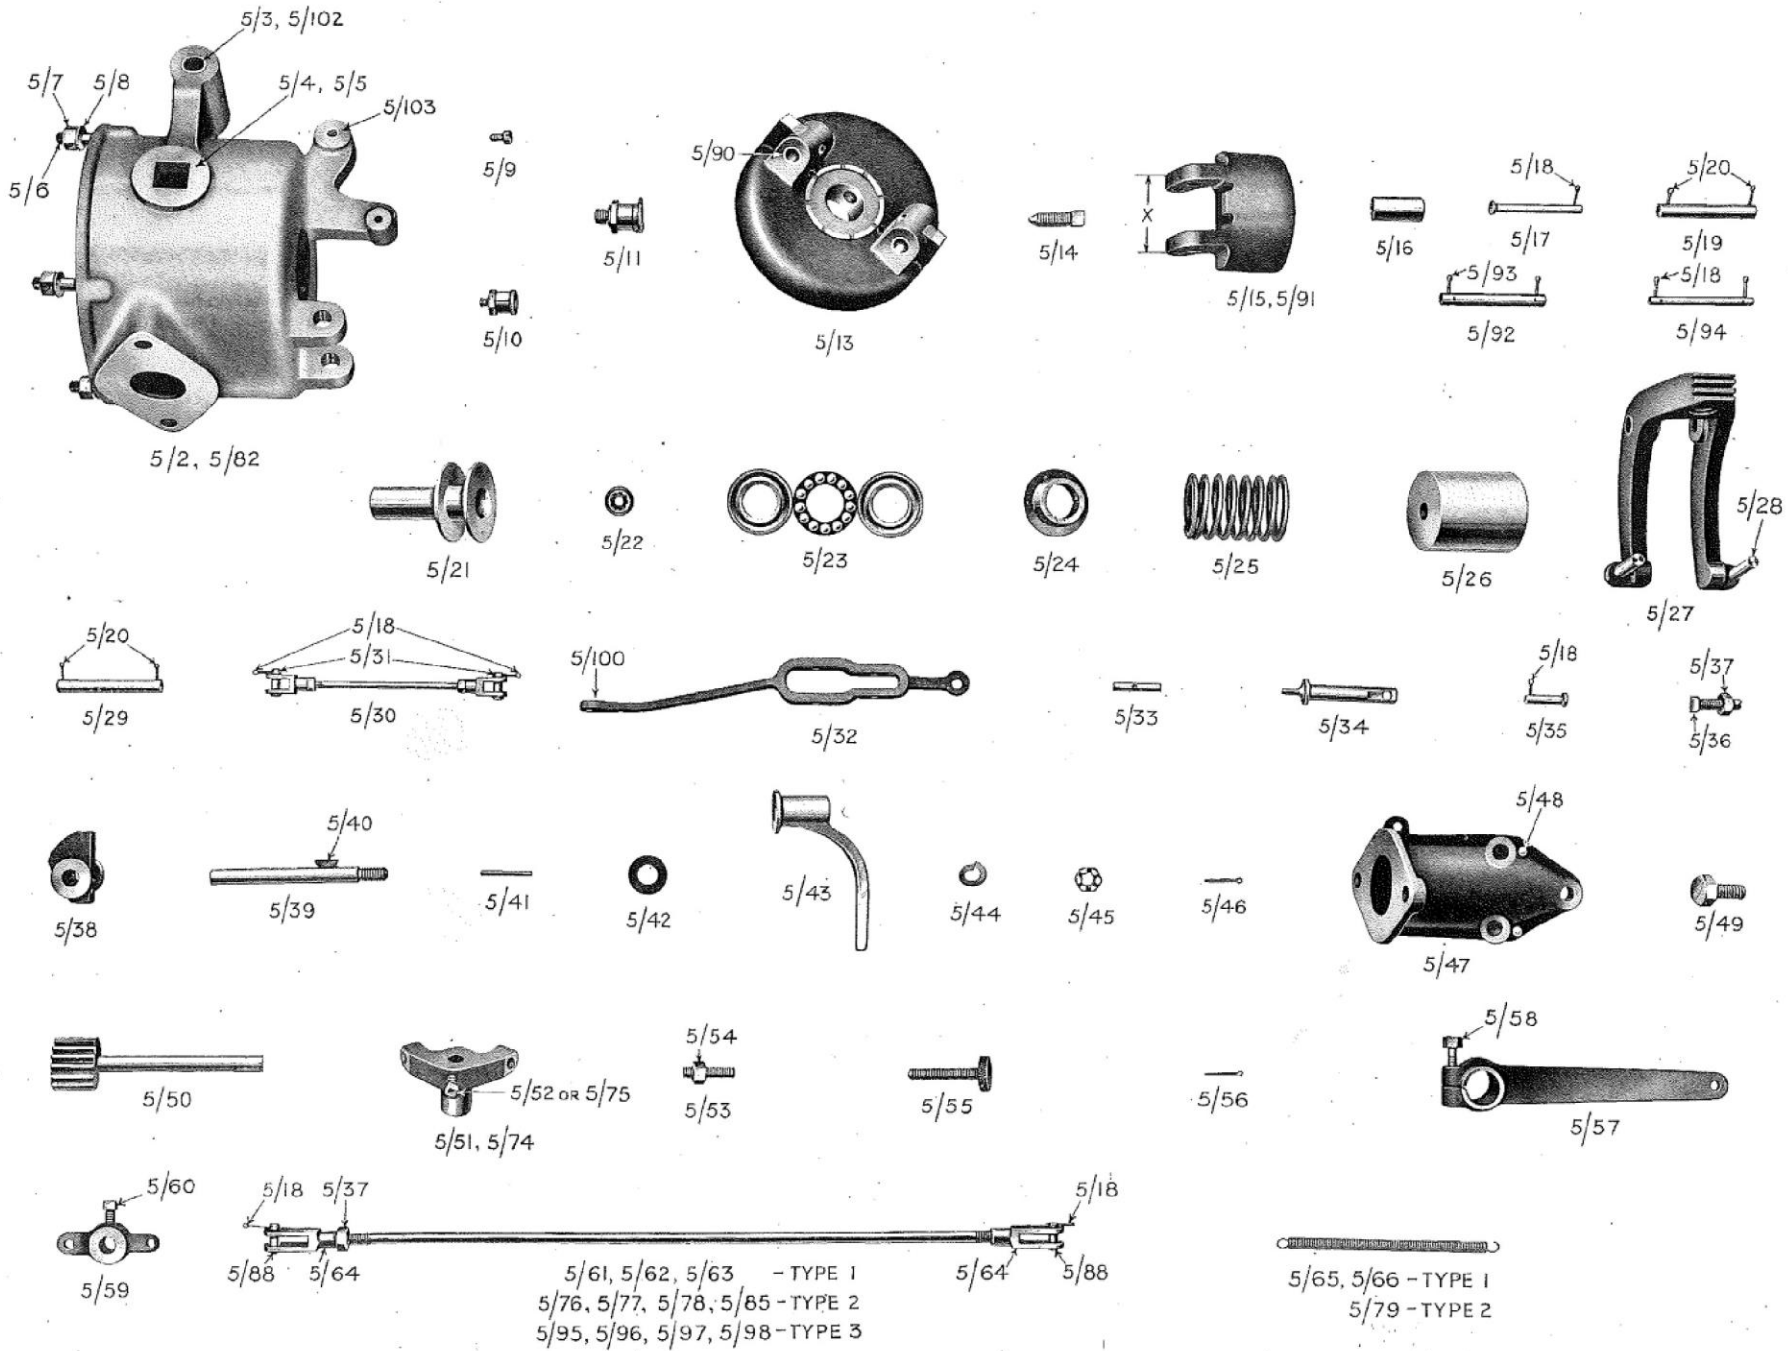


For List see Pages Nos. 61 to 64

GARDNER

   GOVERNOR—Section 5—Plate 14·1

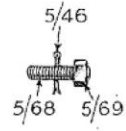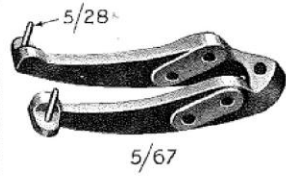

For List see Pages Nos. 61 to 64

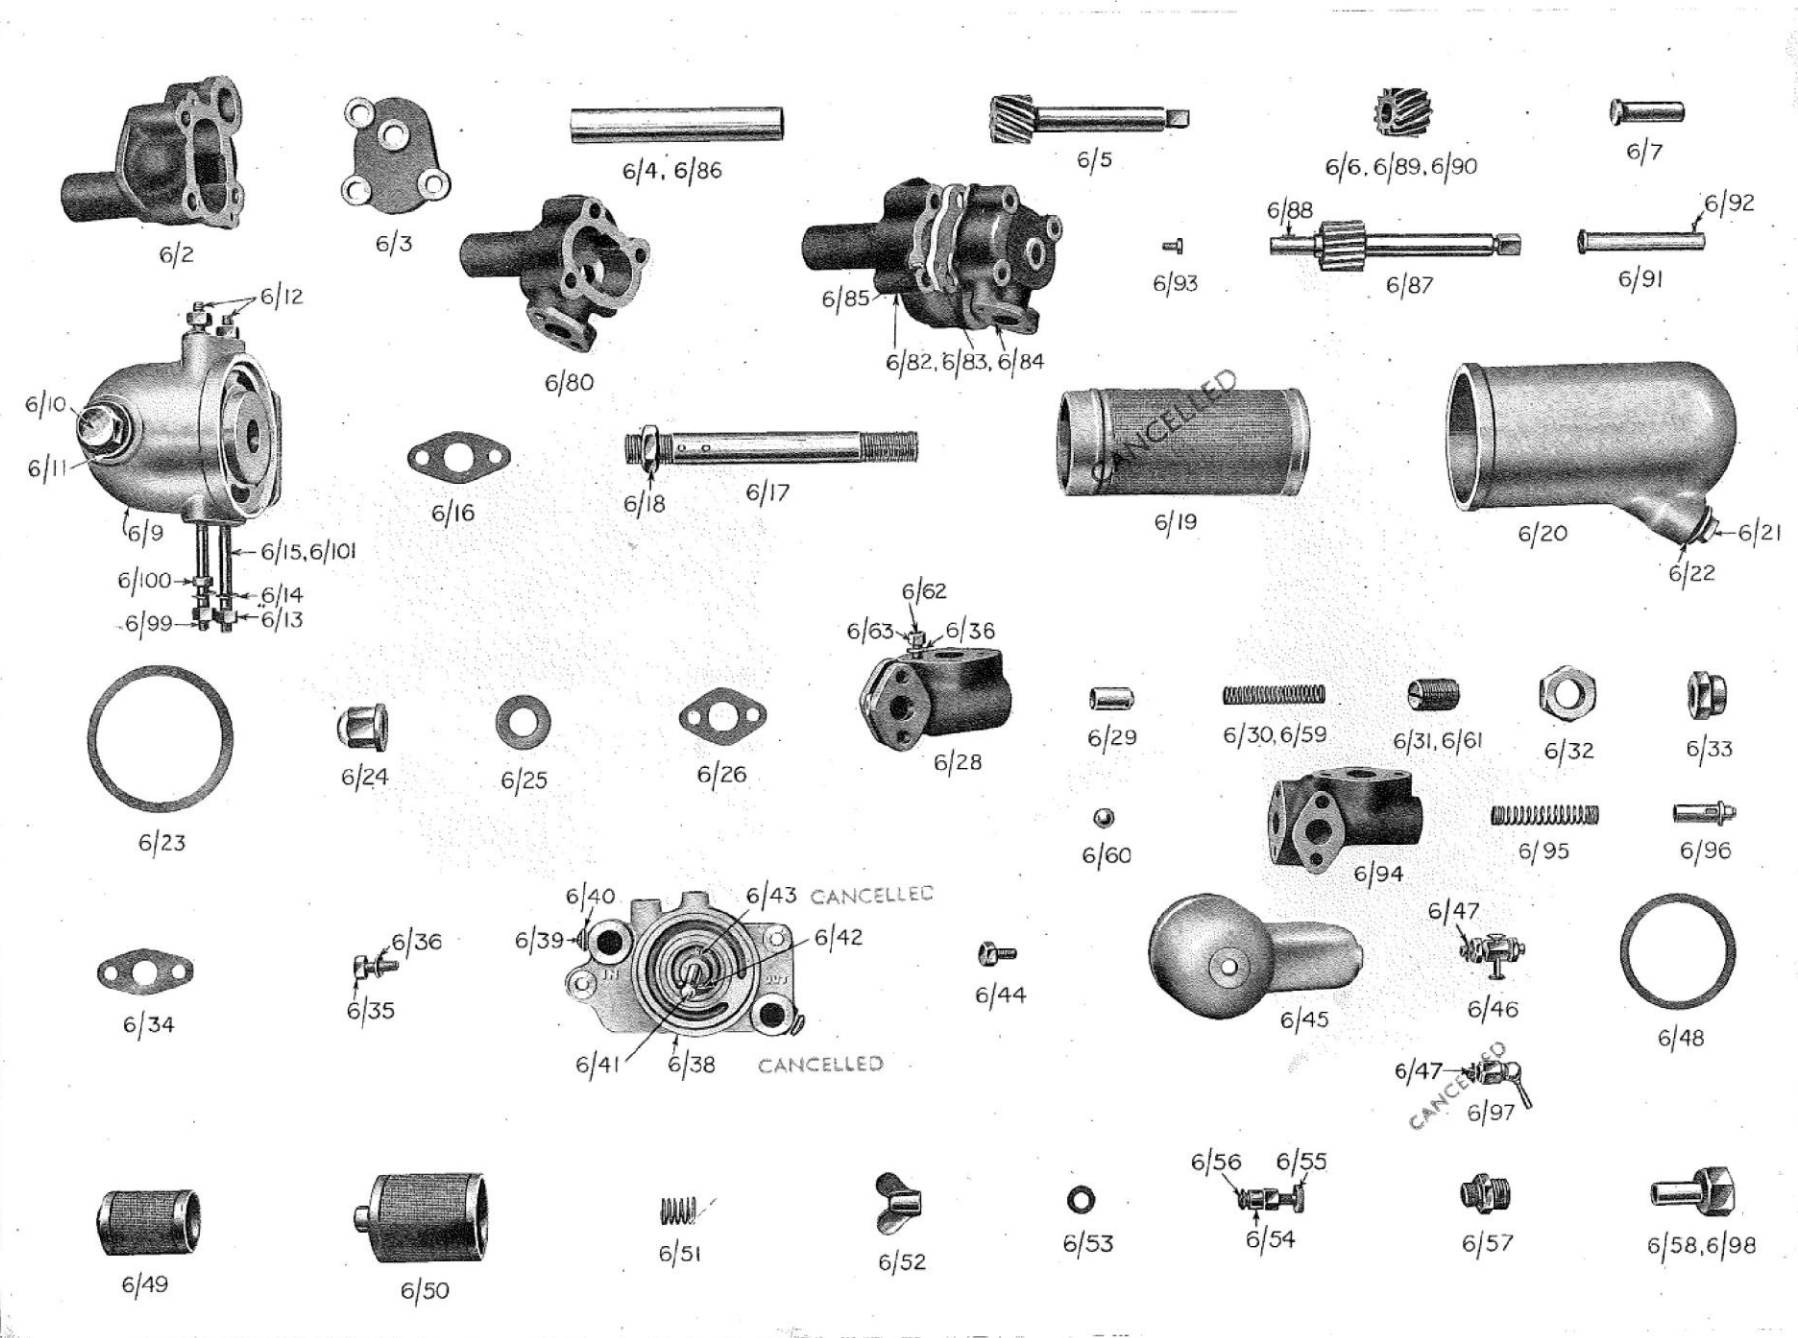

For List see Pages Nos. 67 to 70